

vibewrap™ 2.0

ergonomic bar-dampening system


Padded Pillows made from exclusive Visco Memory Foam

Ergonomic design reduces pressure on Ulnar nerve to reduce numbness and pain

Customizable to your preferences


1

Prepare handlebar surface, using alcohol or acetone to clean. Wrap tape around bar for easy removal in the future.

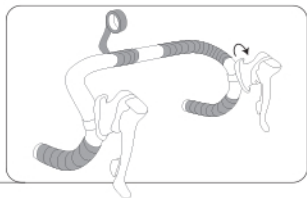


2

Position and mark placement of cushioned pillow pads on bars. Cut to customize if necessary. Remove adhesive backing and adhere each pillow pad to handlebars, holding firmly in place for a few seconds.

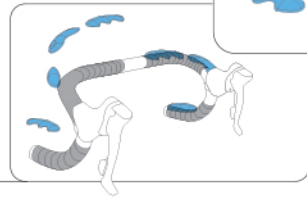

3

Use your favorite bar tape to cover entire handlebar. Starting from the end of the handlebar, gently rotate the tape towards the center and up the handlebar.

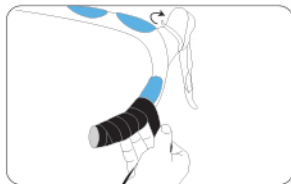

Revolution Cycle Works Company
PO Box 1255
Charlestown RI, 02813
Made in Taiwan
www.revcycleworks.com